

Fleet Services Preventive Maintenance Level "A" Service

Performed every 5000 miles or one year period

1. Change engine oil and filter (if applicable)
2. Inspect and lube steering components
3. Inspect and lube drivelines
4. Inspect CV axels
5. Check transmission / transfer case and differential fluids
6. Visually inspect undercarriage
7. Rotate tires, check tire air pressure, inspect for defects
8. Verify tread depth on all tires
9. Verify wheel lug nut torque
10. Check coolant
11. Check and fill all fluid levels
12. Check and replace if necessary engine and cabin air filters
13. Inspect all belts and hoses
14. Clean and service battery cables
15. Check wiper blades
16. Check function of all lights, horn and vehicle accessories
17. Verify presence of spare tire, lug wrench and jack
18. Check spare tire air pressure
19. Inspect function of all doors, locks, handles, and windows
20. Inspect seat belts
21. Add fuel injection cleaner
22. At each 5000-mile service, Fleet Services will perform any additional maintenance requirements as required by the vehicle manufactures maintenance guidelines.